



POP
TV

Connection guide



8002 8004

pop.lu/tv





Quick connection guide

User manual



Contents



06

Product contents

09

Configuration

07

POP TV decoder

12

Reset

08

Connection

12

Pairing the remote

Product contents

Unpack the decoder and check you have all the accessories



Decoder



Remote control



AAA batteries



HDMI cable




Network cable



Power cable

POP TV decoder

Connect your Homebox to the decoder using the network cable.

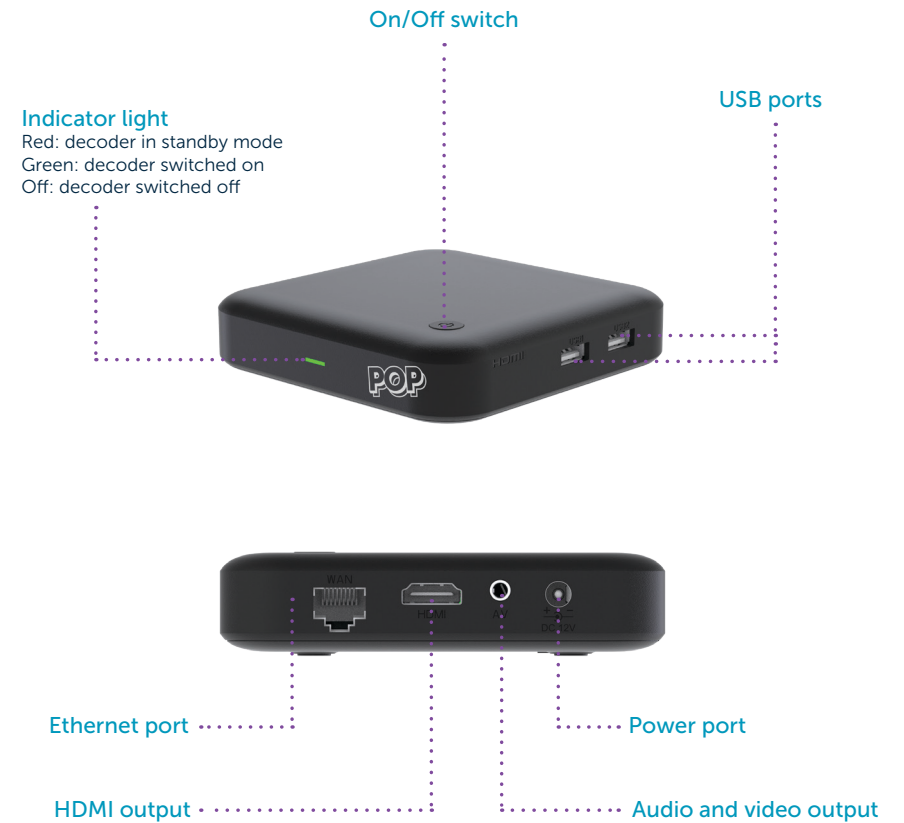


Connection

Connect the power cable to the decoder, then plug it into a mains socket.

Connect the decoder's HDMI output to your TV's corresponding HDMI input using the HDMI cable supplied.

Link the decoder to your Homebox using the network cable.

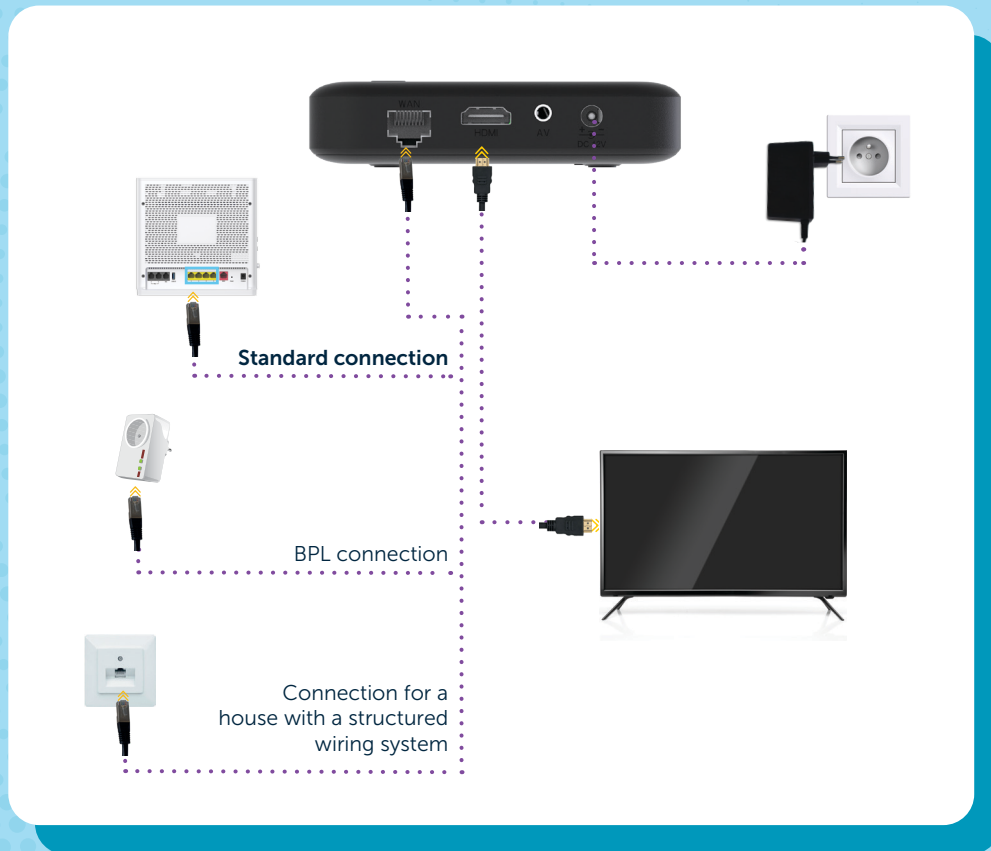

Tips

- ⚡ You can also connect your decoder via Wi-Fi.
- ⚡ The procedure is exactly the same for the Homebox+ model.

Decoder configuration

Start-up

Once you have plugged in all the cables, you can connect your decoder.

1


Switch on your television and set the source as the HDMI input that is connected to the decoder.

2

Check that the decoder is powered on. If the indicator light is not green, unplug the power supply and then plug it back in to restart it.


3

Connect your remote control to the decoder by holding down the following buttons simultaneously for 3 seconds

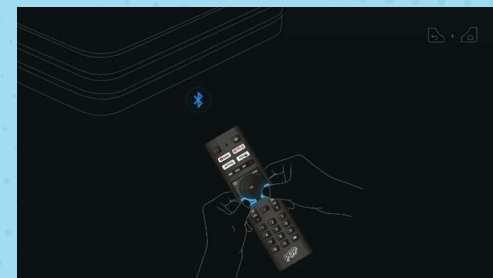


Choose language

This language will be used to configure your decoder and the interface. You can change it at any time in the settings.

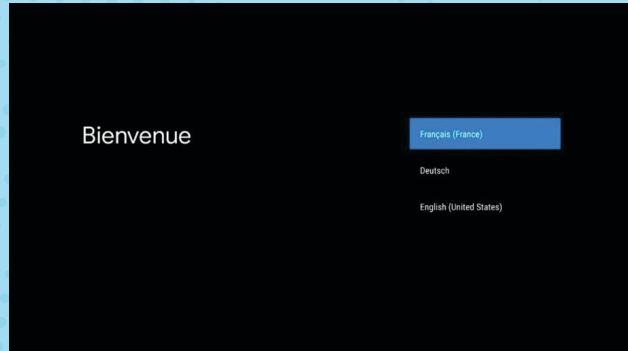

Google login


You can connect your Google account now, or do it later via the notification displayed on the POP TV homepage.

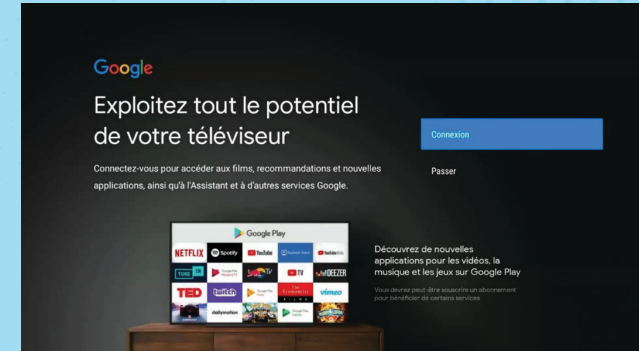

Setting up the internet connection


For optimal stability and quality of service, we recommend using an Ethernet cable to connect your decoder.

 If you choose Wi-Fi, you can select your wireless network at this stage.

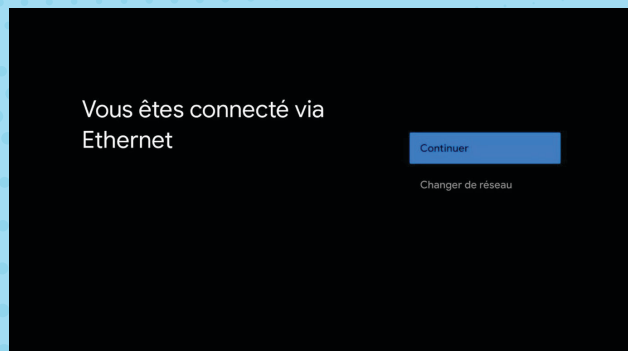

Parent passcode

 Set a 4-digit parent passcode which will be required to access protected options.

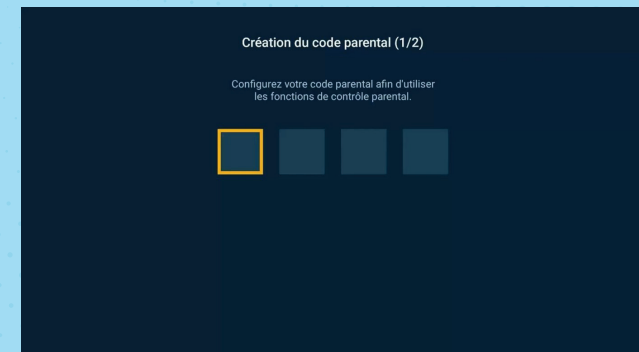

Reset


✦ Hold down the 'On/Off button'



on the remote control for 5 seconds, then select 'Restart' to restart your decoder.

✦ If this does not work, unplug the power cable and then reconnect it to force the decoder to restart.

Pairing the remote

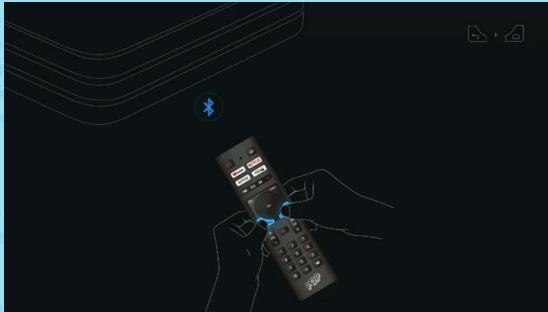

✦ Press the



buttons simultaneously for 3 seconds to pair the remote control via Bluetooth.

✦ The indicator light on the remote control will flash for 30 seconds, indicating that the procedure is in progress.

✦ If the remote control does not connect automatically, search for it manually in your decoder's Bluetooth settings.